



5 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

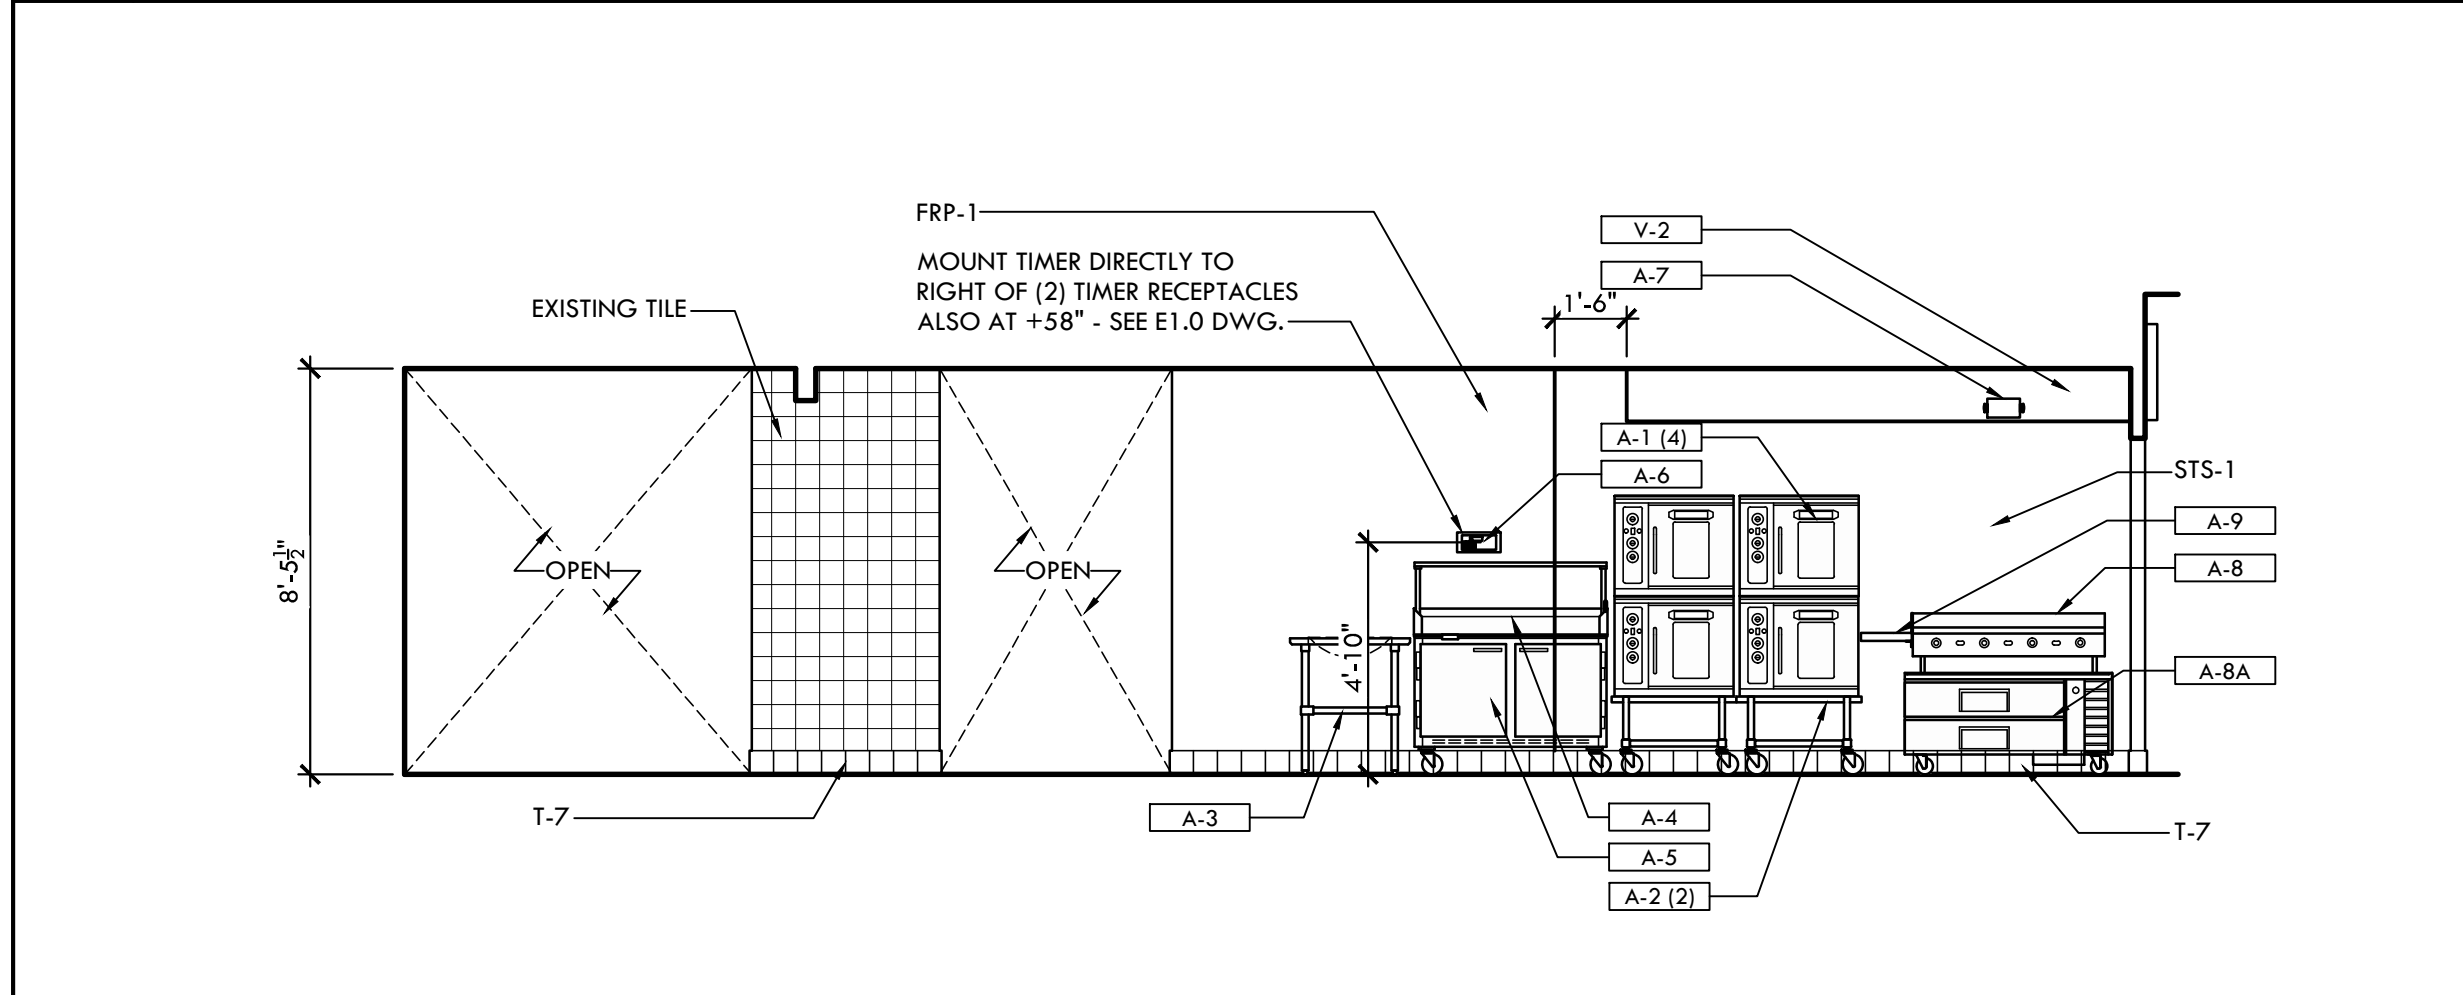


10 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"




15 -  
SCALE:

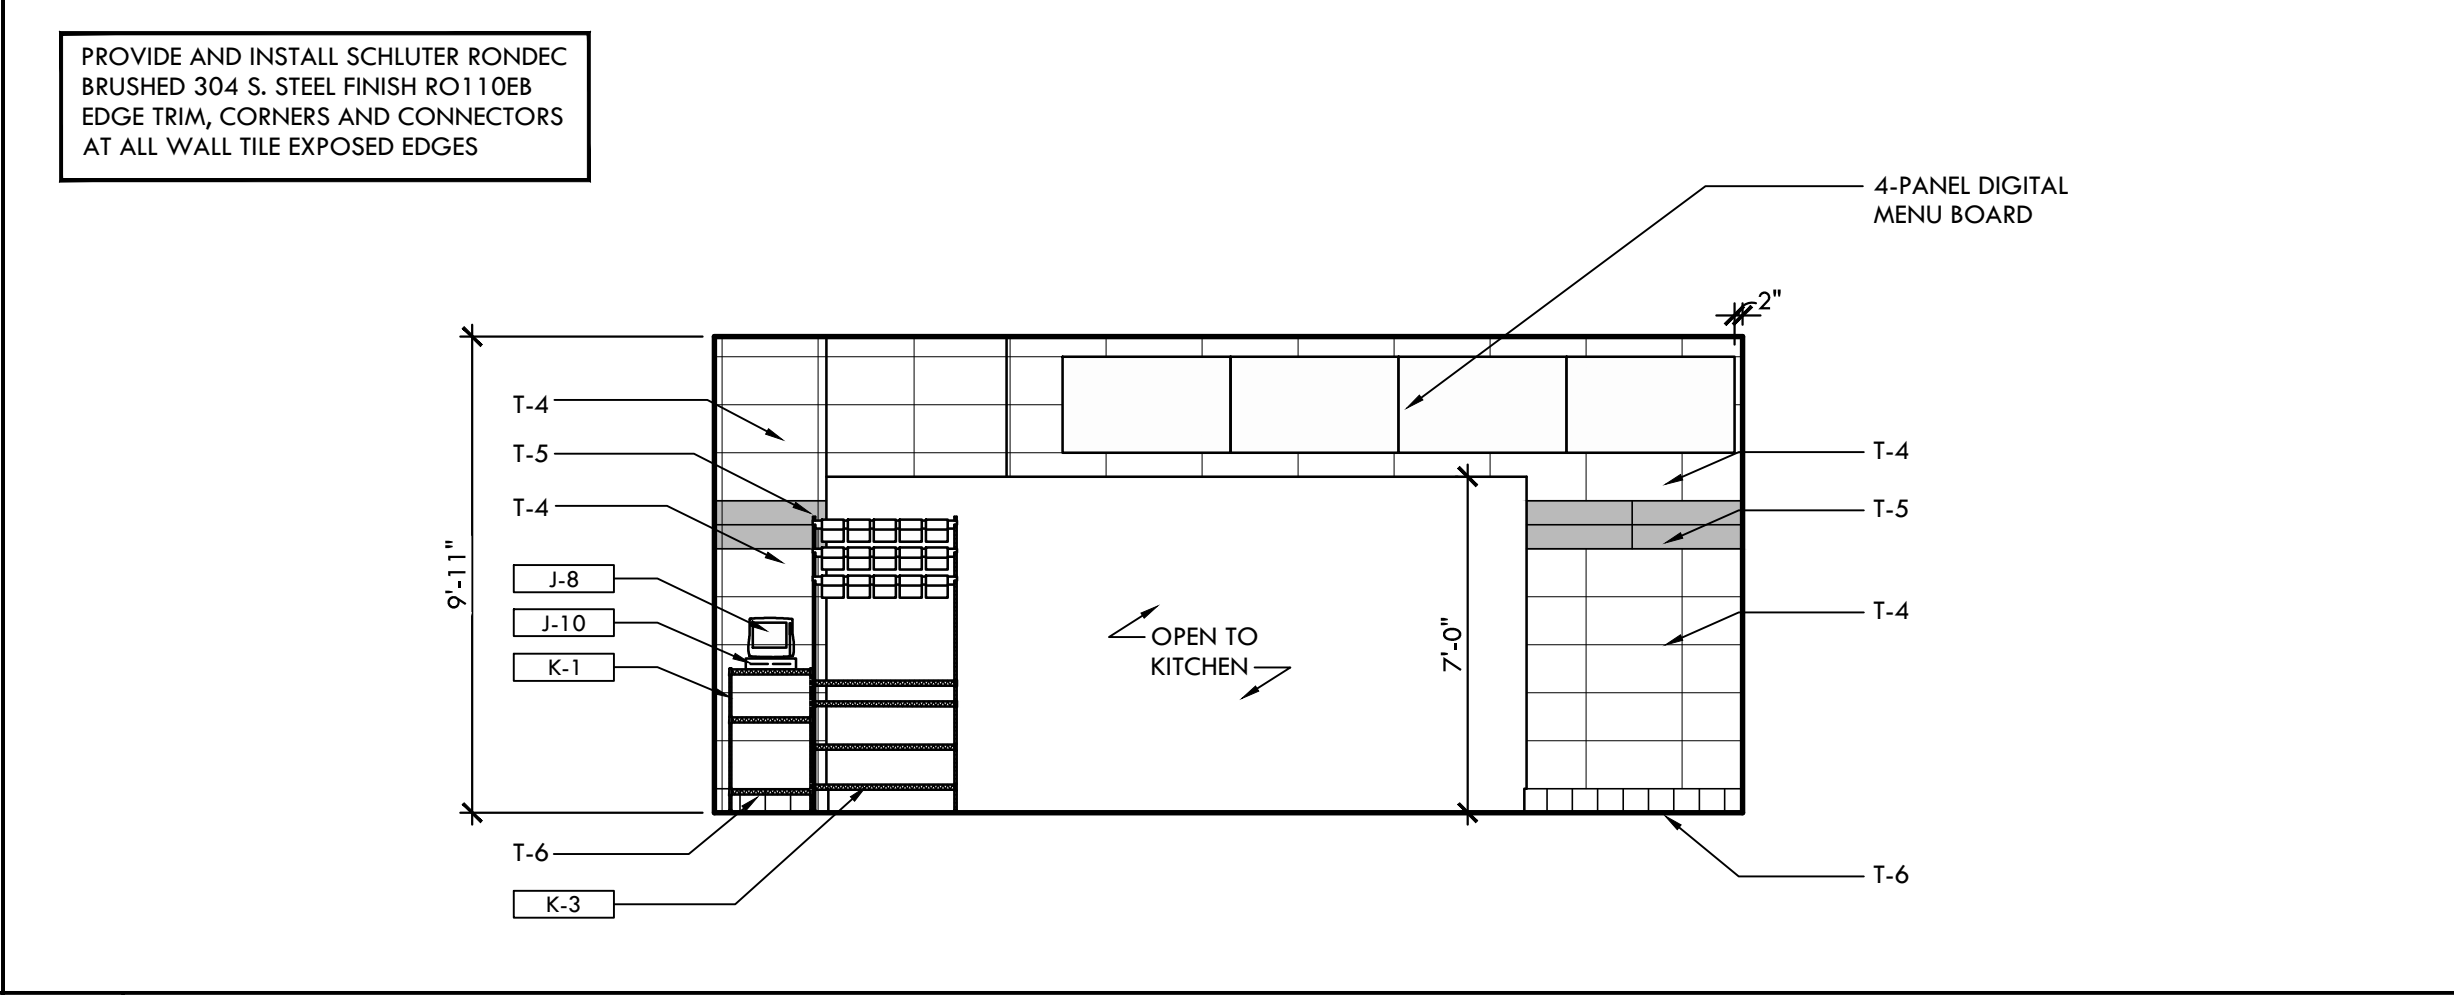


14 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

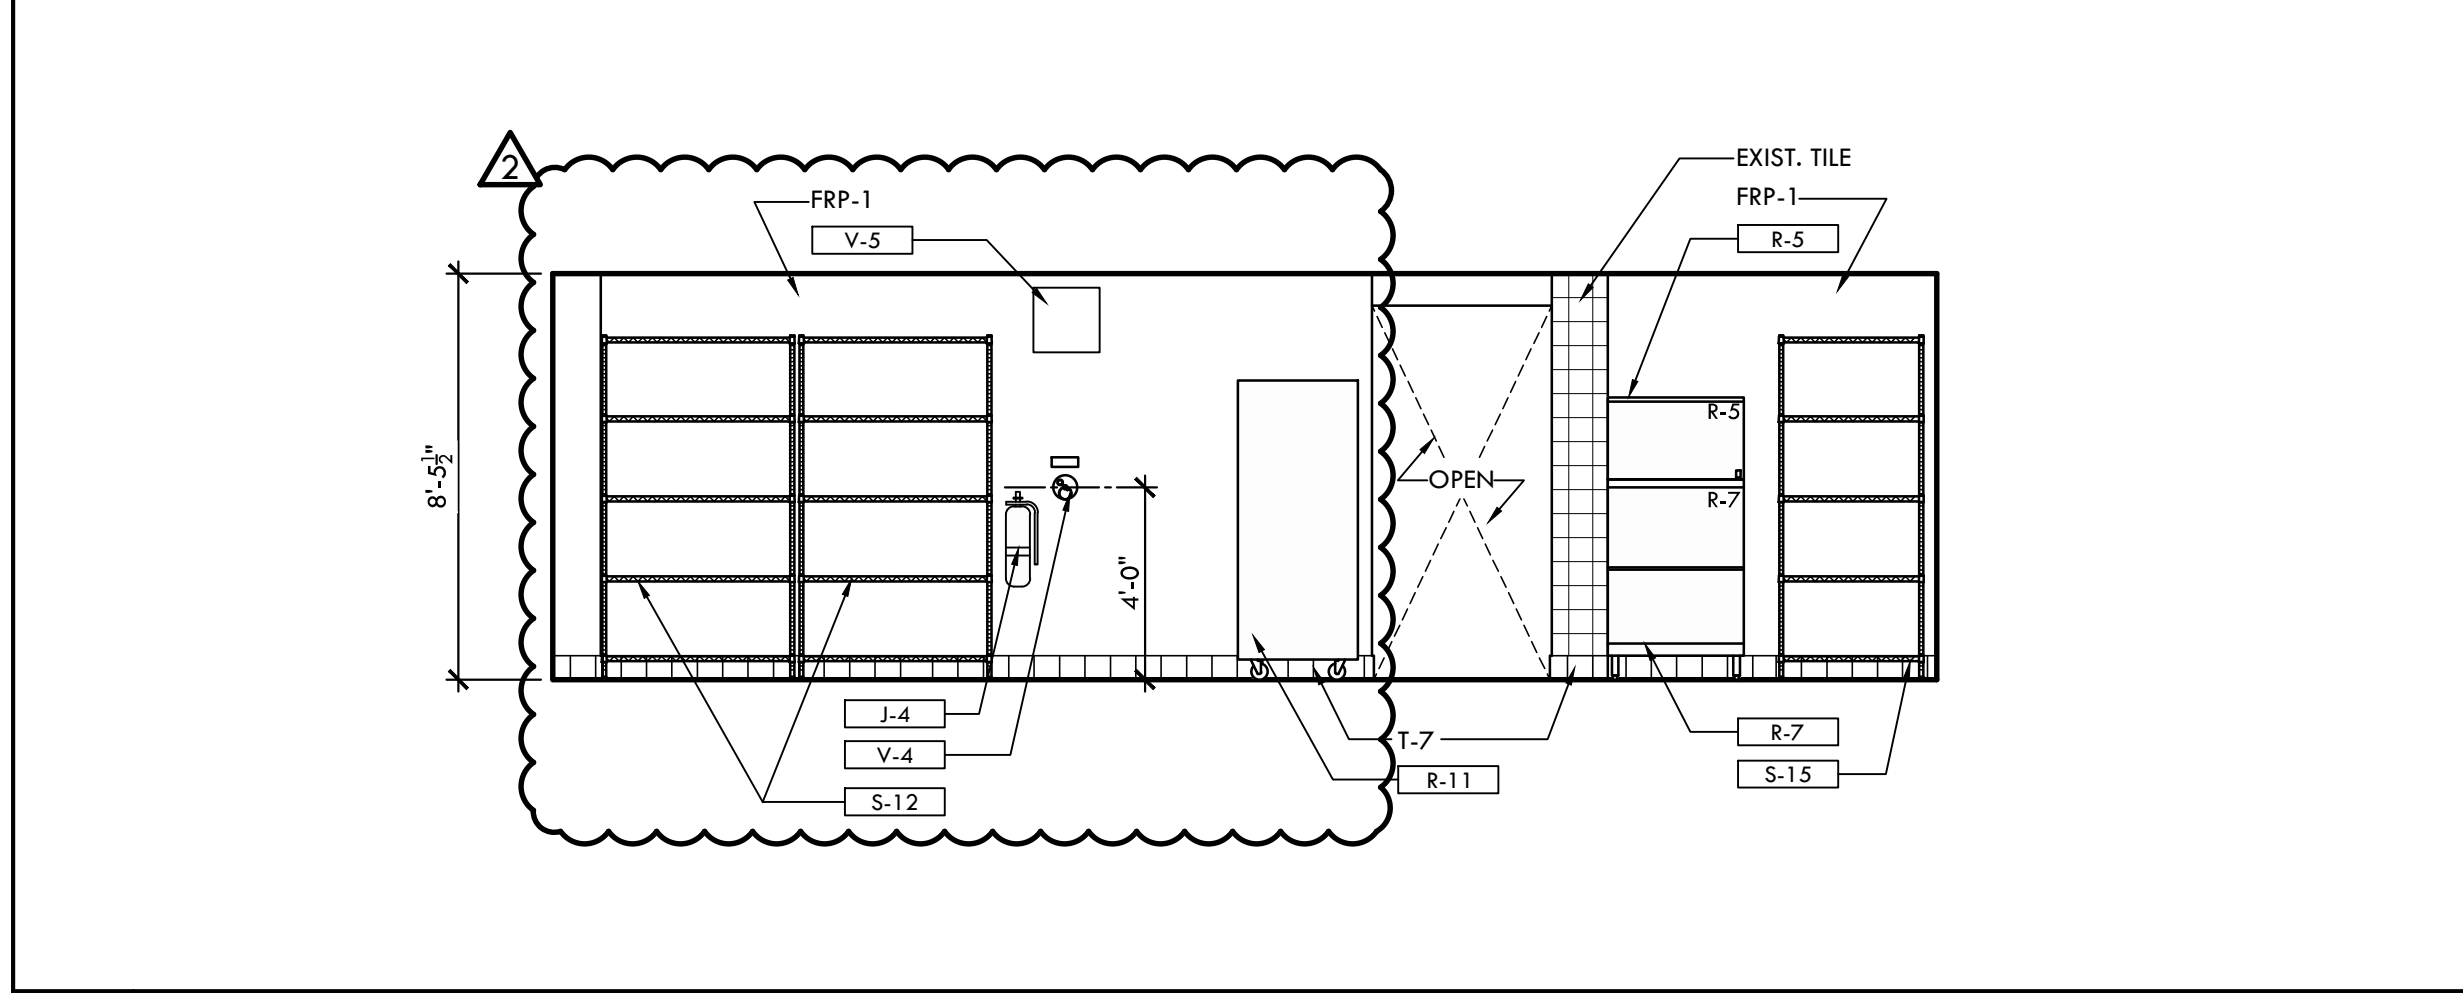


20 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

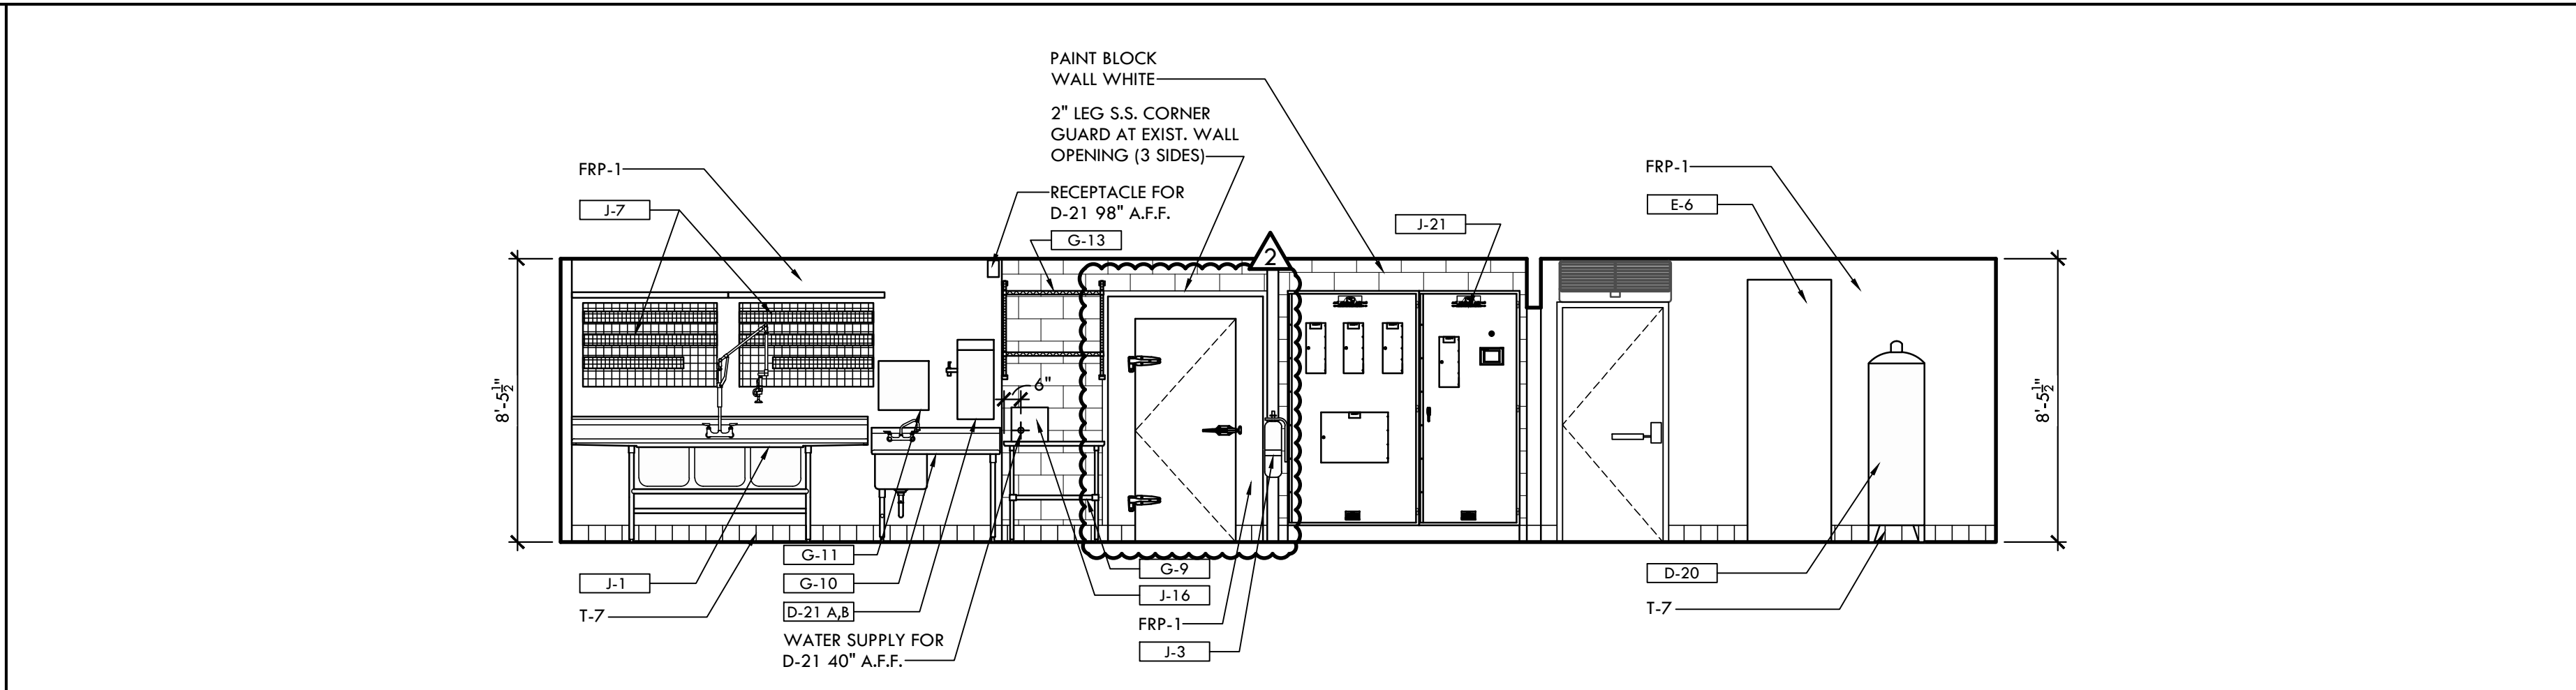


3 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

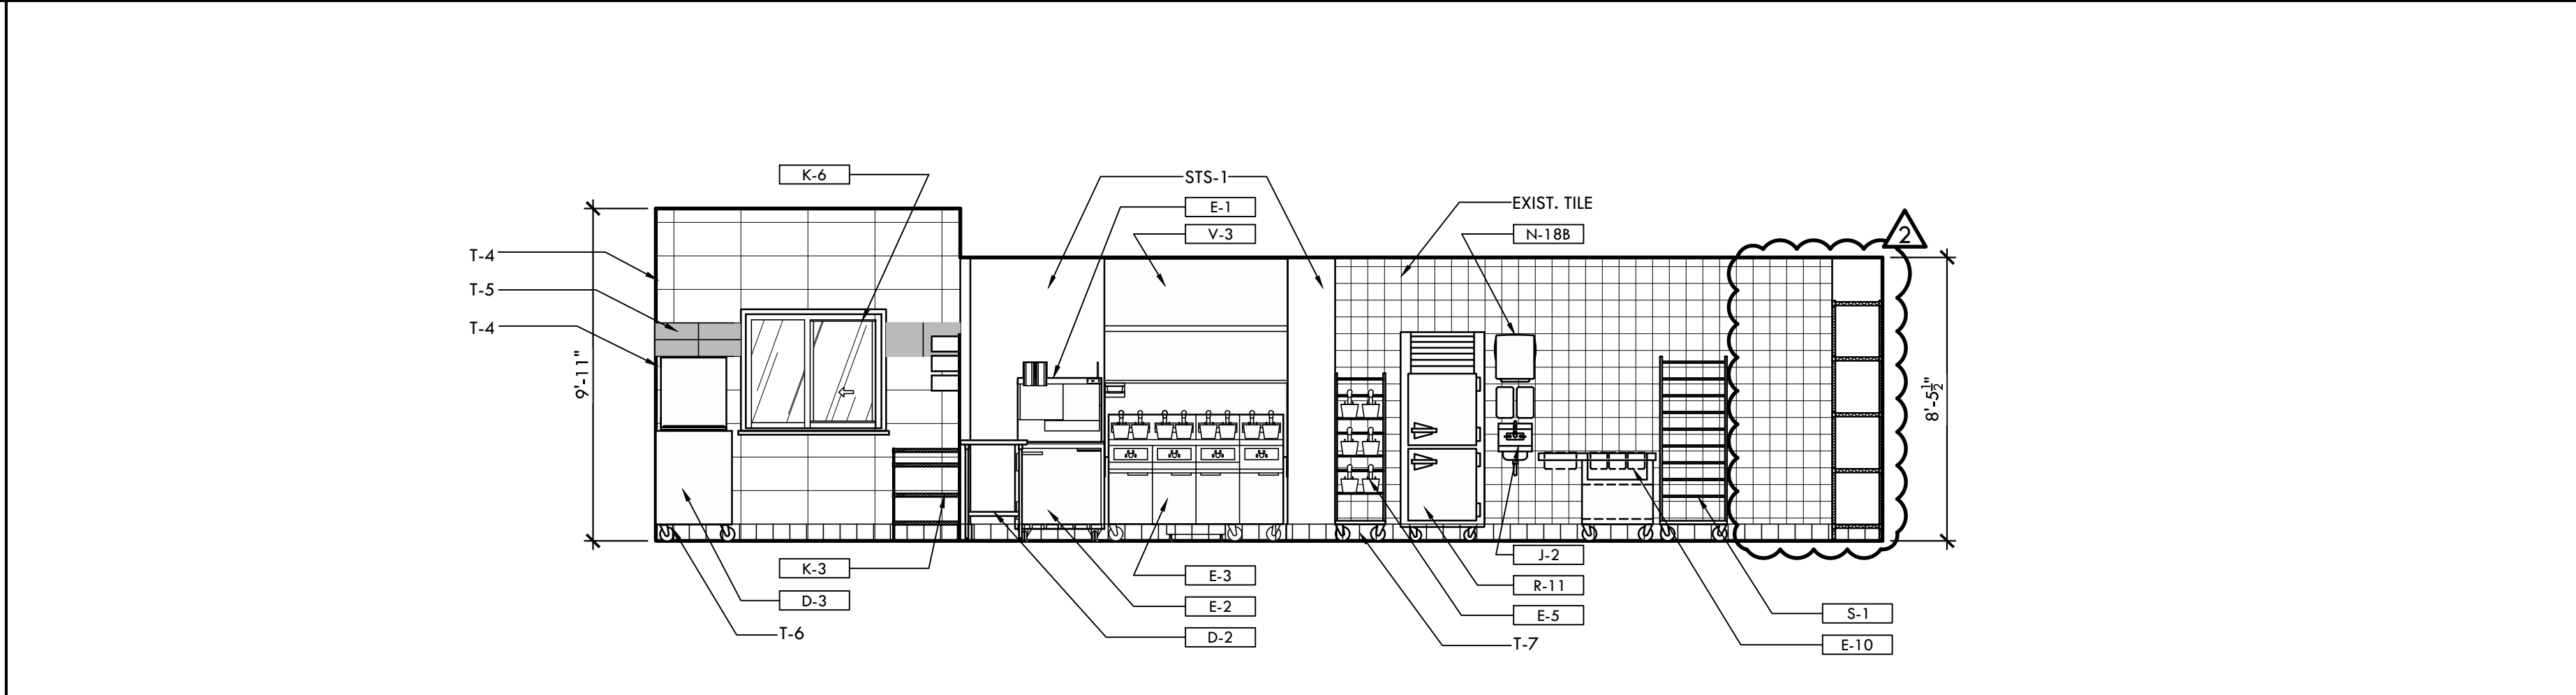


8 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

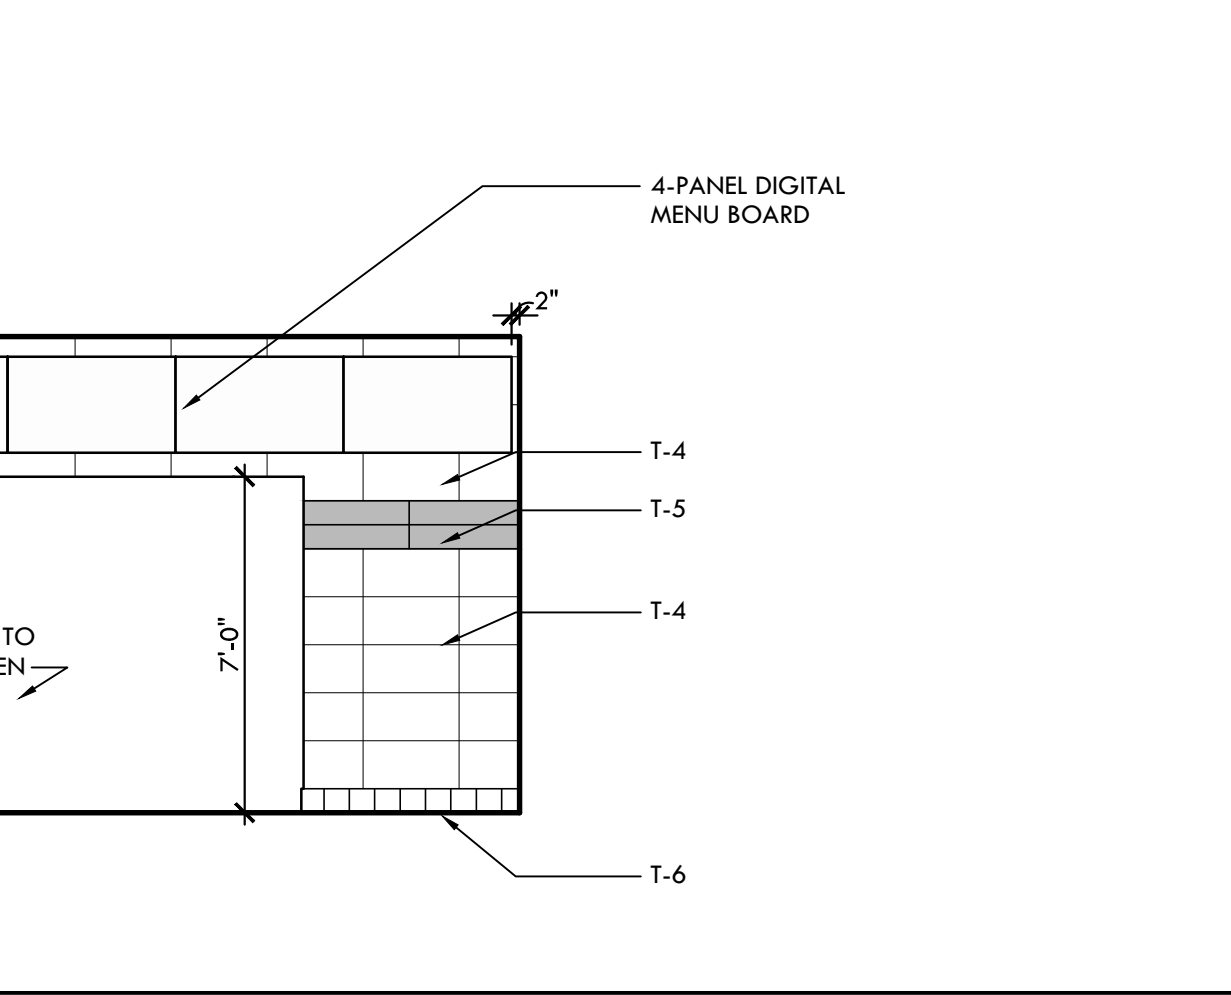


12 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

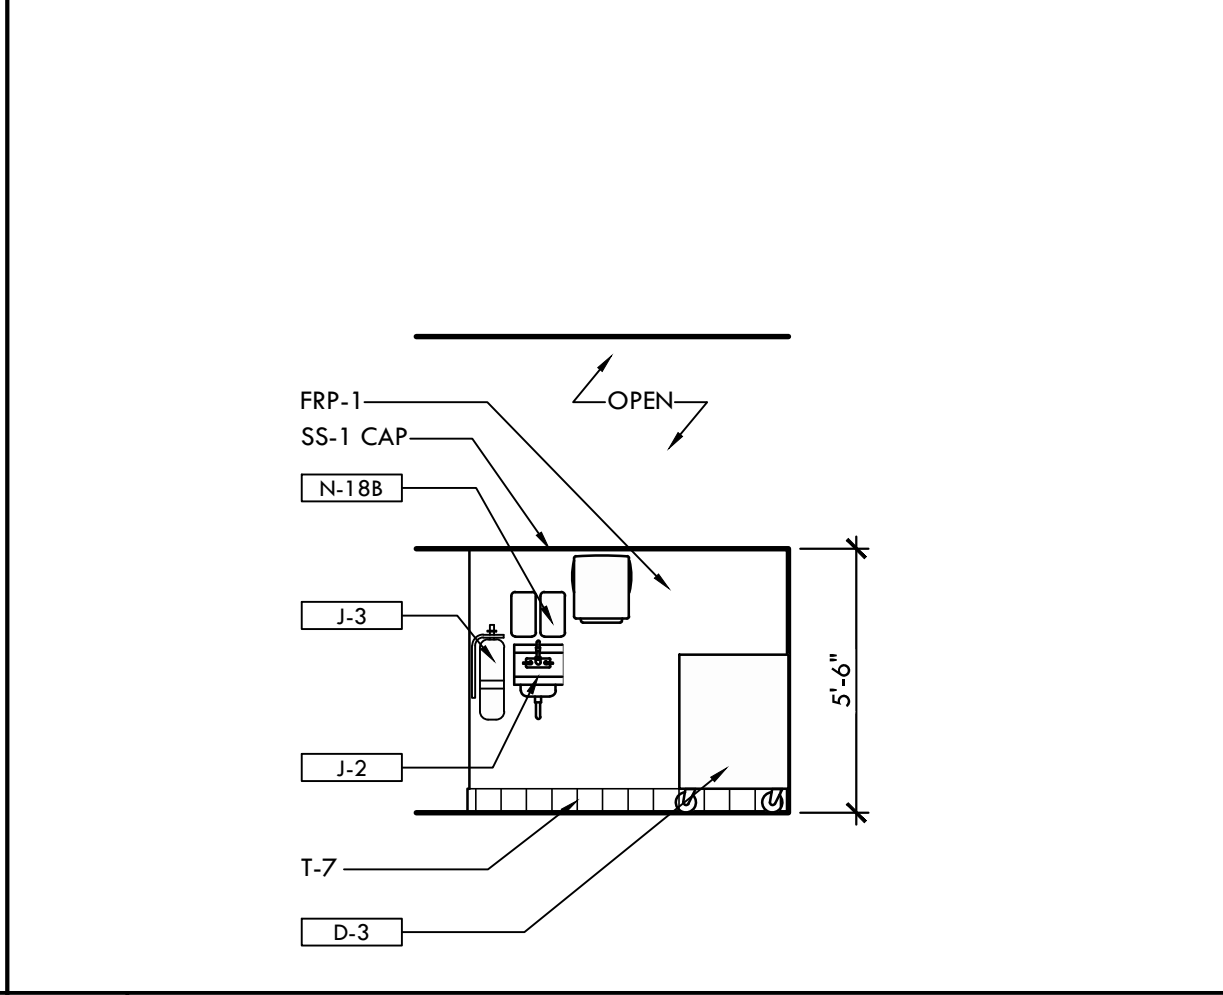

11 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

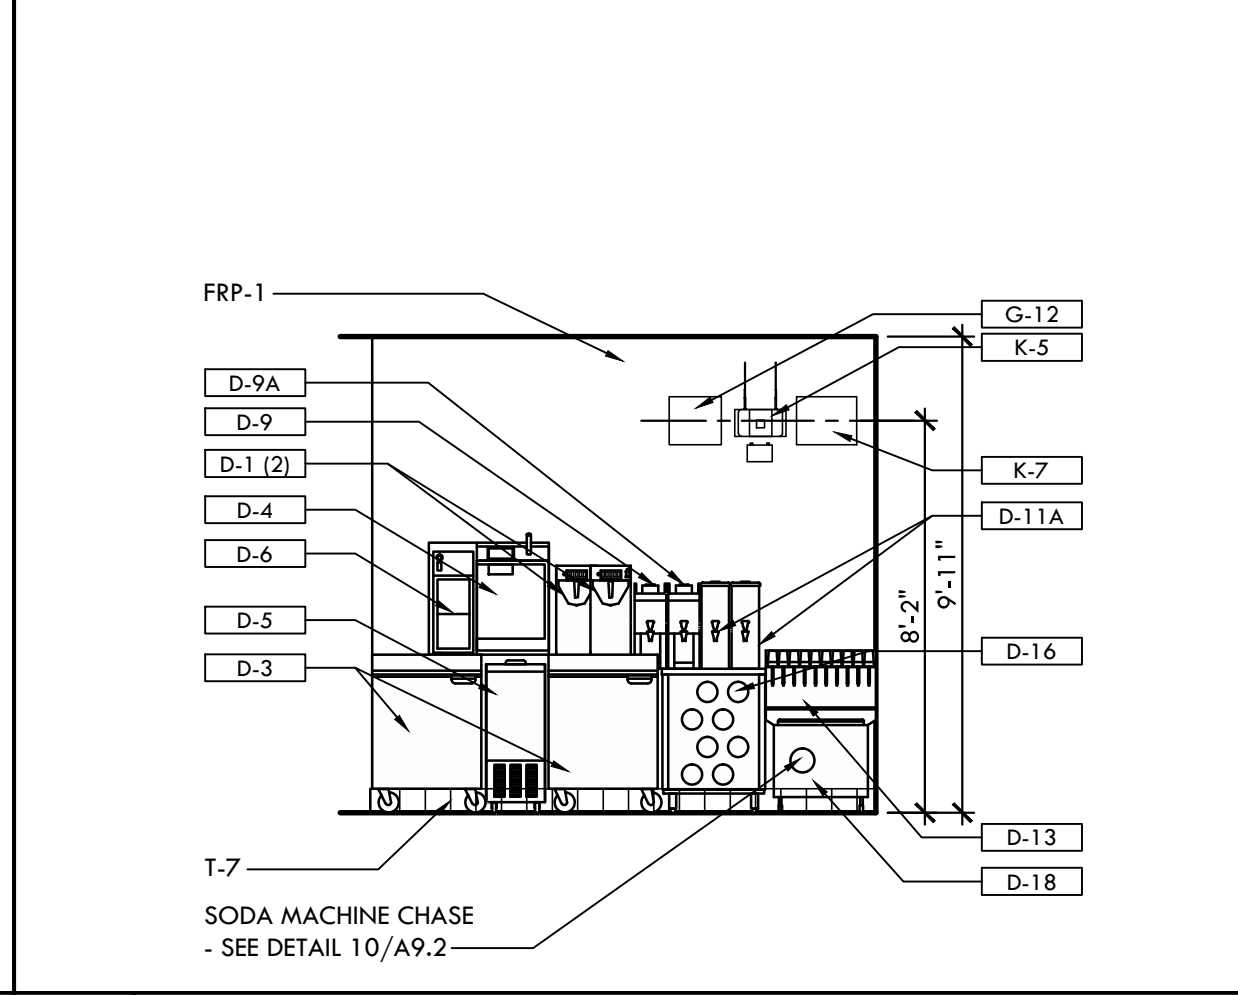

11 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"

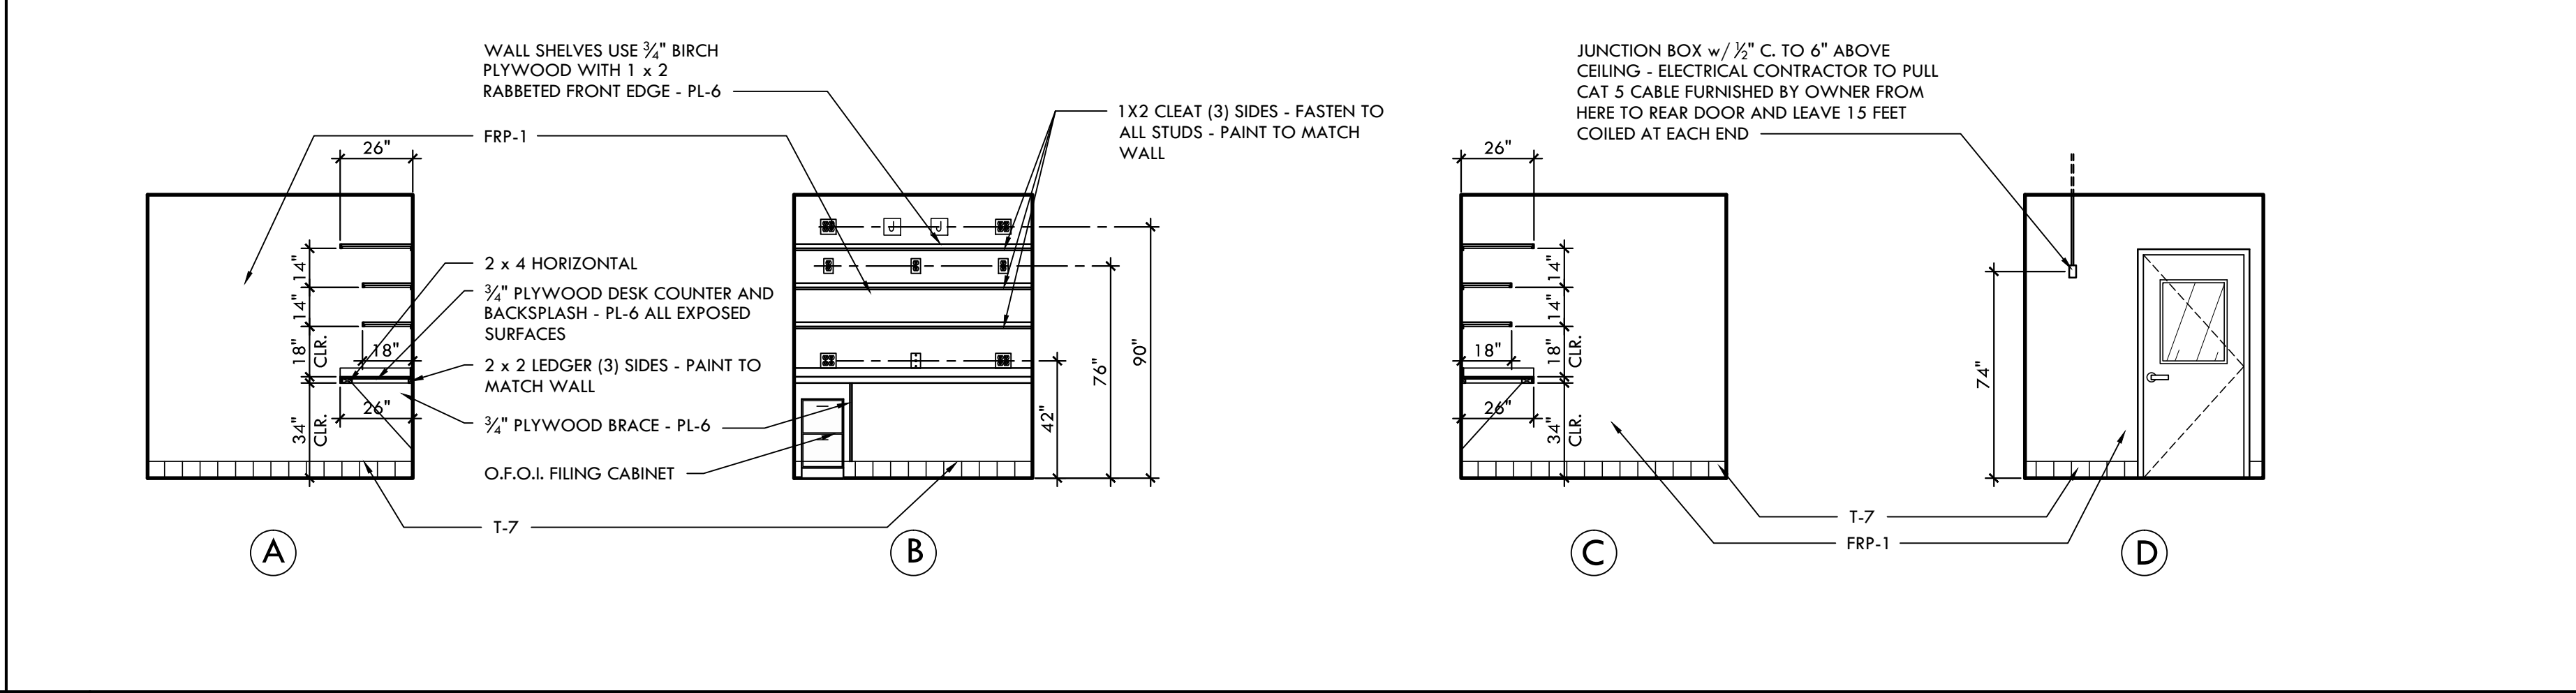

18 INTERIOR ELEVATION  
SCALE: 1/4" = 1'-0"